


Reusable Gift Bags


SMALL

Main Bag Fabric: (2) 10 ½" x 16 ½"
Cuff Fabric: (2) 10 ½" x 9"
Casing Fabric: (2) 2 ½" x 9 ½"
Boxed Corner: 1" from point
Ribbon: (2) 28" pieces

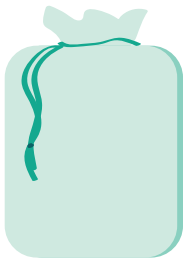


MEDIUM

Main Bag Fabric: (2) 12 ½" x 20 ½"
Cuff Fabric: (2) 12 ½" x 9"
Casing Fabric: (2) 2 ½" x 11 ½"
Boxed Corner: 1 ½" from point
Ribbon: (2) 32" pieces

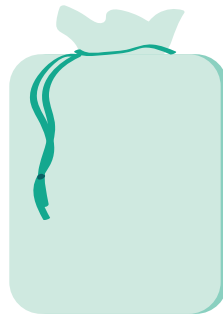

LARGE

Main Bag Fabric: (2) 15" x 25 ½"
Cuff Fabric: (2) 15" x 9"
Casing Fabric: (2) 2 ½" x 14"
Boxed Corner: 2" from point
Ribbon: (2) 34" pieces

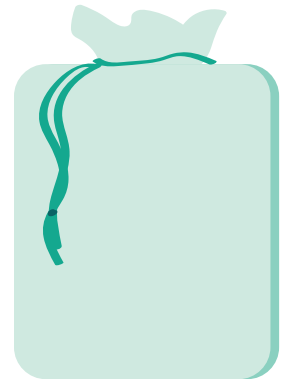

FOR CASING:

Fold and press under each short end of your strip ¼".
Top Stitch both ends.
Press in half long ways.
Repeat for both strips.

FOR CUFF:

Lay both pieces right sides together and sew ¼" seam on the short sides to make a tube.
Fold in half, wrong sides together, and press.

FOR MAIN BAG:

Lay both pieces right sides together. (Be mindful of any directional prints. Make sure they're facing the same way.) Using a ¼" seam, sew down one side, across the bottom and up the other side, leaving the top open.

To box the corners of your bag, line up the side seam and bottom seam of your bag and flatten until a peak forms. Pin in place. Measure down from the point the recommended amount for the size of your bag and draw a line. Sew on that line, remembering to backstitch at the beginning and ending of your seam. Trim off the excess fabric, leaving ¼" seam allowance. Repeat on the opposite side.